

Cleaning procedures for the My Vision X Cleaning Kit (Part number SE-00130-00)



My Vision X Cleaning Kit contains:  
25 pre-moistened cleaning cards  
6 Alcohol saturated snap swabs  
1 pack of lint free wipes

Cleaning Kits may be ordered by faxing  
your purchase order to (937) 291-2197.

Suggested cleaning intervals are defined in  
this text but you might find more frequent  
cleaning is warranted in increased volume  
locations or in dusty environments.

### Weekly Cleaning

It is suggested to run the cleaning card once a week. This will remove dust and dirt buildup from the rollers and image cameras. This will extend the interval between needed manual cleaning as described in the Operator Manual for these components.

1. Remove Ink Cartridge if present during the cleaning process then replace when finished.
2. Next, start the imaging application again and cycle the cleaning card through the My Vision X . Run the cleaning card through the My Vision X 3-7 times, each time rotating the cleaning card top to bottom and flipped over to a different orientation. Cancel the application transaction and discard the used cleaning card.



### Transport

Dust and Debris will accumulate in the transport from the checks being processed. It is recommended to purchase canned compressed air locally and blow out the check path in the transport to remove any debris and dirt from the sensors and track, locations the cleaning cards cannot reach. This should be performed during the weekly maintenance. Please see the Operator Manual section 5 for more instructions.



### Ink Jet maintenance

Clean the ink jet cartridge once a week at the same time the cleaning cards are run through the My Vision X. Clean the ink jet cartridge removed prior to running the cleaning cards by wiping the nozzles with a lint free wipe. Replace the cartridge in the nest. Please see the Operator Manual section 5 for more instructions.



### Monthly

Streaks may develop on the image caused by a build up of ink deposits. If a streak develops on the image and running the cleaning card does not remove streak, remove the inner and outer covers, gently open the front image camera and using an alcohol saturated snap swab wipe down the glass on both front and back cameras. Close the front image camera and replace both the inner and outer covers.

